


MEMBRANE OVER GYPSUM

POURED GYPSUM UNDERLAYMENT

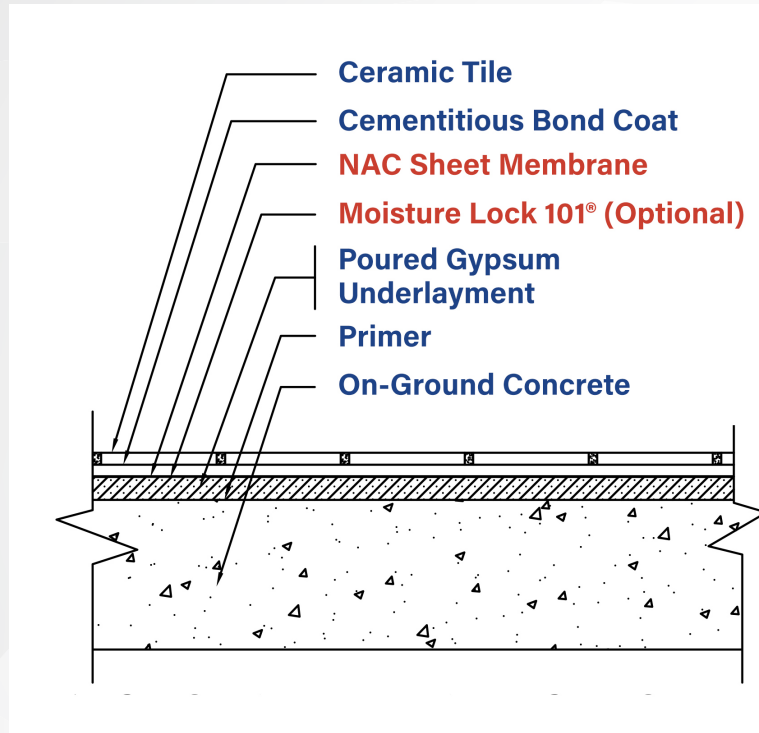

All NAC sheet membranes (ECB®, ECB® 75, Strataflex®, SAM® 3 and Super SAM® 125) may be used in this type of application with a poured gypsum underlayment.

Apply one coat of Moisture Lock 101 to fully cured gypsum underlayment.

Allow 24 hours after Moisture Lock application before installing primer and membrane.

For specification purposes, the NAC products used in this system are:

- NAC Sheet Membranes
- NAC Primer
- Moisture Lock 101 (Optional, as needed)

Visit NACproducts.com or call 800-633-4622 for more information.

Detail refers to F200 for installing a membrane over gypsum. See current edition of the TCNA Handbook for additional guidelines.



www.nacproducts.com | 3200 South Main Street, Akron, OH 44319

See product PDS, Install, and SDS sheets for complete instructions and safety requirements.

©2020 NAC Products, Inc. All Rights Reserved Rev. 10/20 #F200-NAC