
MEMBRANE INSTALLATION

BUTT JOINT AND OVERLAP JOINT

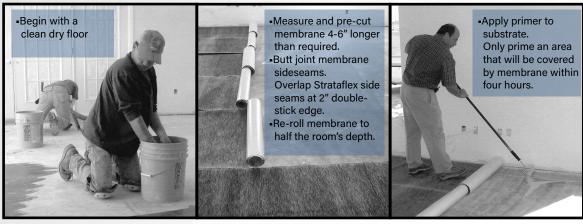



 Press membrane into place with the flat side of a trowel or a 100# roller.
Pay extra attention to Strataflex side seams.





Butt Joint NAC Membrane at side seams.



Overlap Strataflex side seams. Remove film from 2" double-stick edge on underlying sheet and carefully press into place.

